
Web Creaser on Holder

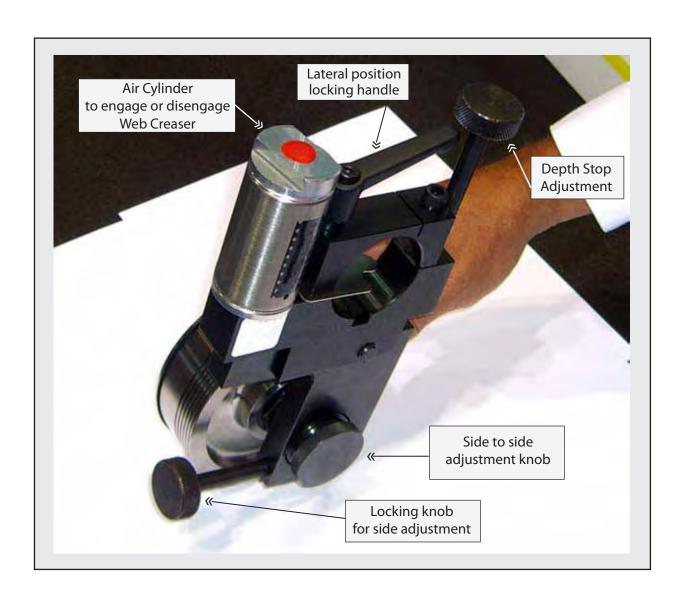



Sales Office (973) 383-7920 Info@TechnifoldUSA.com www.TechnifoldUSA.com



Web Creaser

Creasing system to fit a Web Press

Stock Code: TRI-WEB-02

Shaft Size: 20mm Shaft Outer Diameter: 125mm

SETTINGS



Additional Information

Options

A fixed version is available To fit 4" Shaft (101.6mm) Outer Diameter 4.9" (124.64mm)





Web Creaser shown attached to Technifold accessory holder

Contents of Package

2x Male/Female Components:

5x Creasing Rib - Orange (M-33A): (Light to Medium Stocks)

5x Creasing Rib - Blue (M-34): (Medium to Heavy Stocks)

5x Creasing Rib - Yellow (M-33):

(Medium to Heavy Stocks)

1x Extraction Tool:

used to remove the inserts from Male Component



Shop Online 24/7 at http://store.technifoldusa.com

Tech 060

Web Creaser Crease Setting Guide



Channel 1 use M-33A Orange creasing rib Range of stocks: .004" - .007" 50# offset - 60# Cover



Channel 2 use M-33A Orange creasing rib or M-34 Blue Range of stocks: .006"-.008" 40 - 80# Cover



Channel 3 use M-33A Orange creasing rib or M-34 Blue Range of stocks: .006"-.009" 40 - 80# Cover




Channel 4 use M-34 Blue Range of stocks: .007" - .010" 60-100# Cover



Channel 5 use M-34 Blue creasing rib or M-33 Yellow Range of stocks .008 - .012" 75# - 120# Cover



Channel 6 use M-34 Blue creasing rib or M-33 Yellow Range of stocks: .009"+ 100# Cover +

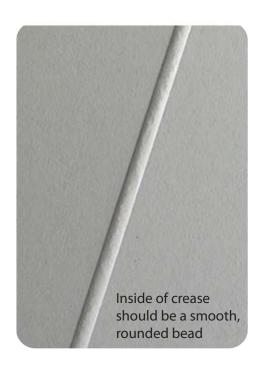


Tips for a High Quality Crease with the Web Creaser

- 1) Start with recommended crease settings for your stock (above)
- 2) Crease with male into the <u>outside</u> of the fold. Each component can be used as either male OR female to allow creasing from either side of the web.
- 3) Use **minimum pressure** needed to get a smooth, rounded bead on the inside of the crease
- 4) **Test** different settings to see what gives you the best results for your stocks. You may also find that lighter stocks require creasing with the male component on the inside (conventional scoring.)

Tech Support: email techsupport@technifoldusa.com

To Order Replacement Parts:

Order Online 24/7 at http://store.technifoldusa.com or Call 973-383-7920 M-F 10-4 eastern

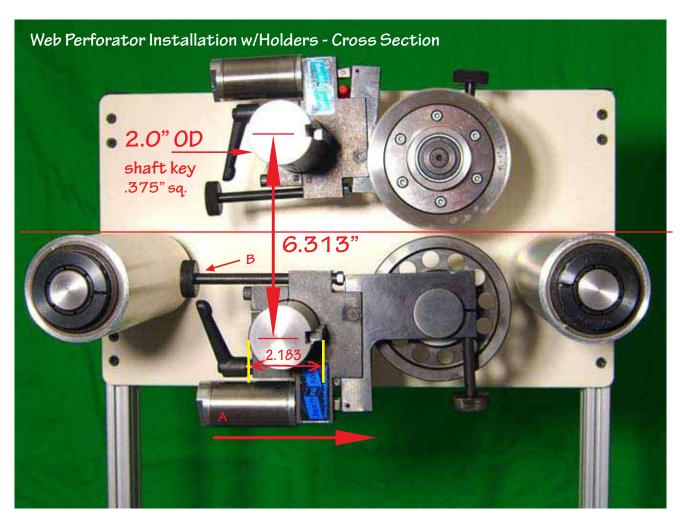





Setting position of perf anvil relative to lead-in and lead-out rollers.

- Engage air cylinder 'A'
- Use adjustment knob 'B' to position anvil so that it's in line with your rollers, as indicated by red line.

Questions about your installation?
Need to place an order?

Technifold USAShop Online 24/7 at http://store.technifoldusa.com

Sales Office (973) 383-7920 Info@TechnifoldUSA.com www.TechnifoldUSA.com

